

DESCALING DISHWASHING MACHINES

PRE-WASHING MACHINE.

1. Turn OFF the chemical dispenser.
2. Empty the dishwasher.
3. Fill the the dishwasher.
4. Run dishwasher for one cycle.
5. Empty the dishwasher again.
6. Refill the Dishwasher

DESCALING MACHINE.

1. Add 300mL of “Dishwasher Descaler” to the wash tank.
2. Run dishwasher for one cycle.
3. Inspect interior of the dishwasher for scale. If scale is still visible, repeat steps 1 &2 until desired outcome is achieved.
4. Empty the Dishwasher.

PREPARING MACHINE FOR USE.

1. Fill the dishwasher.
2. Run dishwasher for one cycle.
3. Empty the dishwasher.
5. Turn ON the chemical dispenser.
6. Refill the dishwashing machine.

DISHWASHER IS READY TO BE USED!